

Electric Spring Return Verticle Series

Wiring Diagram Number Key

ACTUATOR SERIES

WESRV — Wiring ESRV

BASE MODEL

A000 — ABZ 430 thru 2600
 0430 — ABZ ESR430
 0860 — ABZ ESR 860
 2600 — ABZ ESR2600

VOLTAGE

A — 120VAC
 B — 220VAC
 C — 24VAC
 D — 24VDC
 E — 380VAC / 3PH
 F — 440VAC / 3PH

SERVICE

1 — OPEN / CLOSE
 A — NONE
 Z — SPECIAL

2 — MODULATING
 A — DHC-100 (120vac)
 B — DHC-100A (220vac)
 C — DHC-100B (24vac)
 D — Blank
 E — DHC-400 (24vdc)
 X — NONE
 Z — SPECIAL

POSITION FEEDBACK

A — Auxilary Switches (2 Standard)
 4-20mA Transmitter (Standard)
 G — OTX-100*
 H — OTX-101*
 J — OTR-100*
 X — None

FAIL MODE

CW — Clockwise
 CCW — Counter Clockwise

MISC

X — End of Number

W	E	S	R	V	A	0	0	0	-	A	2	A	-	A	X	-	C	W	-	X
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

This wiring diagram key is not intended for actuator configuration.
 Consult factory for ordering.



Valve Solutions
 ABZ Valves & Controls



Title:

ESRV Wiring Diagram Key

Rev 0